



# Wiring Diagram For 100-4126

Warning light must be conventional bulb. LED bulbs will not work with this type of Alternator.

R= IGNITION POSITIVE  
THIS POSITIVE MUST GO  
OFF WITH IGNITION SWITCH

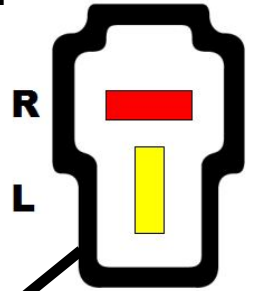

Battery Warning Light L

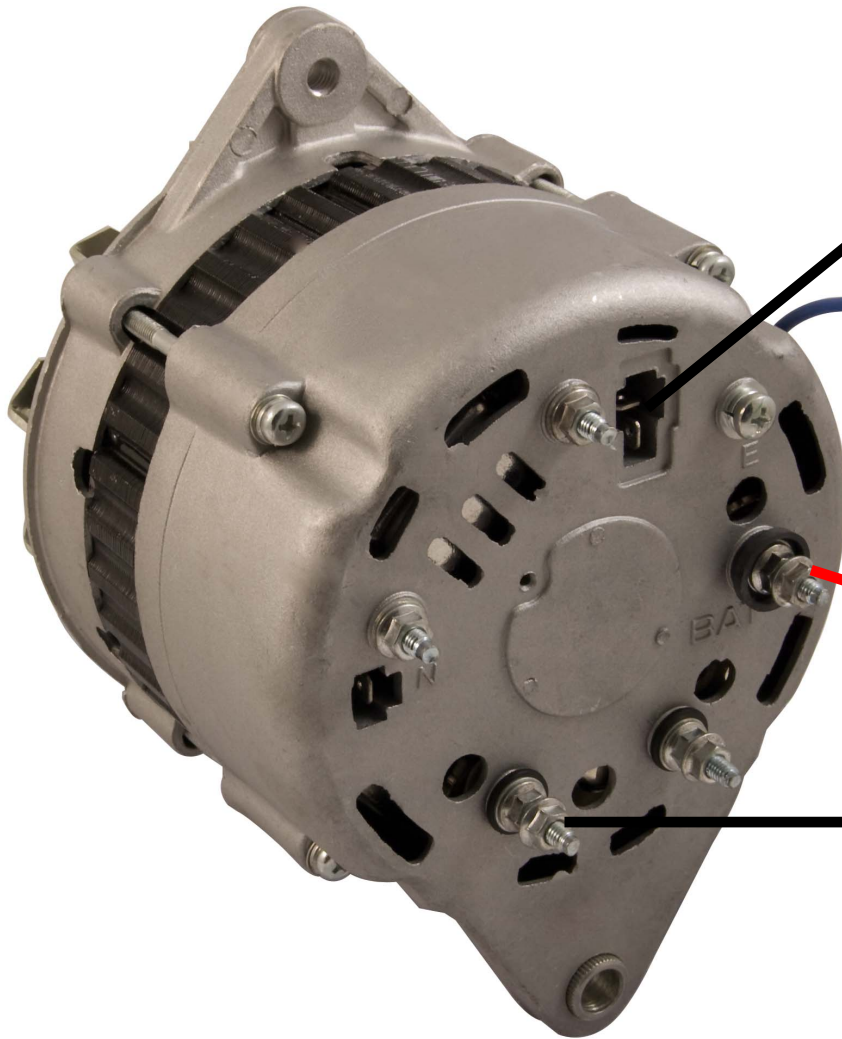

Phase Terminal  
AC Output rev counter ect

B+

B-

Part No. 100-4126 12V 80Amp  
Insulated Return

LR180-03  
LR180-03A  
LR180-03B  
LR180-03C